

# INSTALLATION INSTRUCTIONS

Cut out drilling template and follow instructions for correct location of installation holes.

**Step 1** - If door is less than 1 1/4" thick, use two pliers to break off spindle according to instructions below.

See Figure 2.

**Step 2** - Assemble outside handle with button (arrow facing up), spindle cup, spindle, and spring. Guide this assembly through installation holes from outside of door. See Figure 3.

**Step 3** - Push button to extend spindle. Position inside latch over holes, guiding spindle into rectangular slot in center of latch. Insert both machine screws into threaded sleeves and turn each down to a snug position. Do not tighten. Check to make sure that spindle moves freely by pushing button.

**Step 4** - From inside of door, install machine screw in lower handle hole and tighten. Tighten top screws.

**Step 5** - Install strike plate on wood jamb or aluminum "Z" bar to firmly engage latch bolt. Use enclosed shims to extend strike if necessary.

## Wright Products

Rice Lake, Wisconsin 54868

98090-000 Rev. A

Patent D436,830

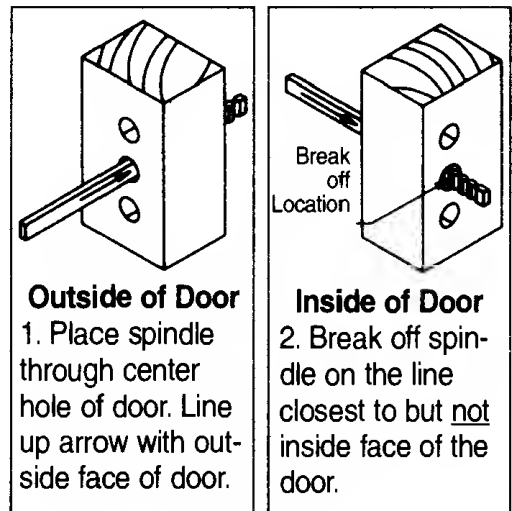


FIGURE 2

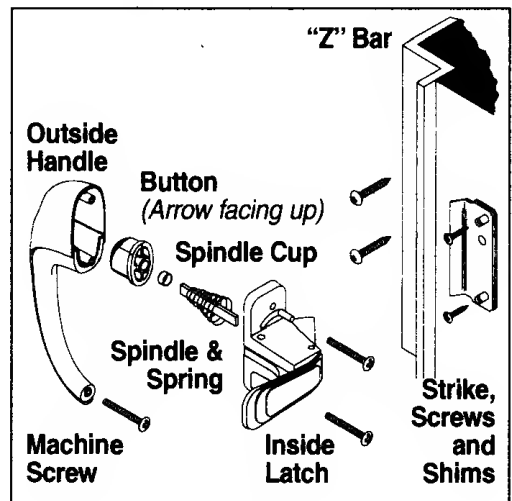


FIGURE 3